


# INSTALLATION INSTRUCTIONS

## Braemar Manual Digital Thermostat

### Rated to 24VAC Maximum

#### 1. SELECT THERMOSTAT LOCATION

- Thermostat should be located central to the main living area approximately 1.5m above the floor. The main living area should be confirmed with the occupants.
- Avoid direct sunlight.
- Avoid mounting on an external wall.
- Avoid mounting near heat sources such as stoves, televisions, etc.
- Do not locate in air stream from an outlet register.
- Do not locate in draughty areas.
- Do not locate in hallways.
- Do not locate adjacent to the return air grille.
- Always fill cable entry hole in wall.

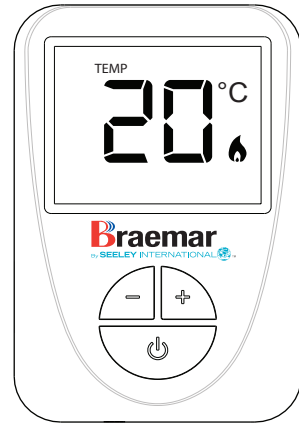


#### 2. PREPARE WALL AND WIRING

- Drill a suitably-sized hole in wall at centre of selected thermostat location - this is to feed the thermostat cable through the wall for connection to the thermostat.
- Run twin-core cable between heater and thermostat location, and feed thermostat cable through the pre-drilled hole in the wall.

#### 3. FIT THERMOSTAT TO WALL AND CONNECT WIRING TO THERMOSTAT

- Remove thermostat from wall bracket.
- Place wall bracket on wall allowing cables to feed through the middle of the bracket. Secure bracket to the wall with screws.
- Secure twin-core cables into terminal block located on wall bracket.

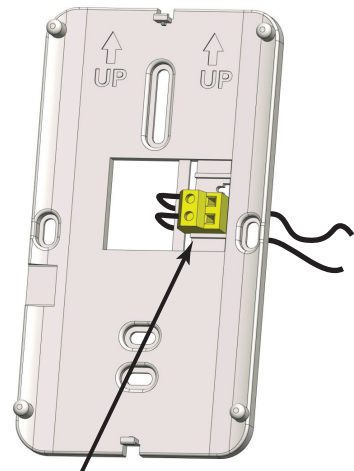


Twin core cable from heater to wall bracket terminals

## 4. FIT BATTERIES AND RE-ASSEMBLE

- Remove battery compartment cover on rear of thermostat and fit 2x AAA batteries supplied.
- Mount thermostat to wall bracket.

## 5. CONNECT THERMOSTAT CABLE TO HEATER

- Feed thermostat cable through grommet in room fan end of heater.
- Connect the thermostat cable to the manual thermostat screw terminals on the heater circuit board - marked **"MANUAL T'stat"** on circuit board.

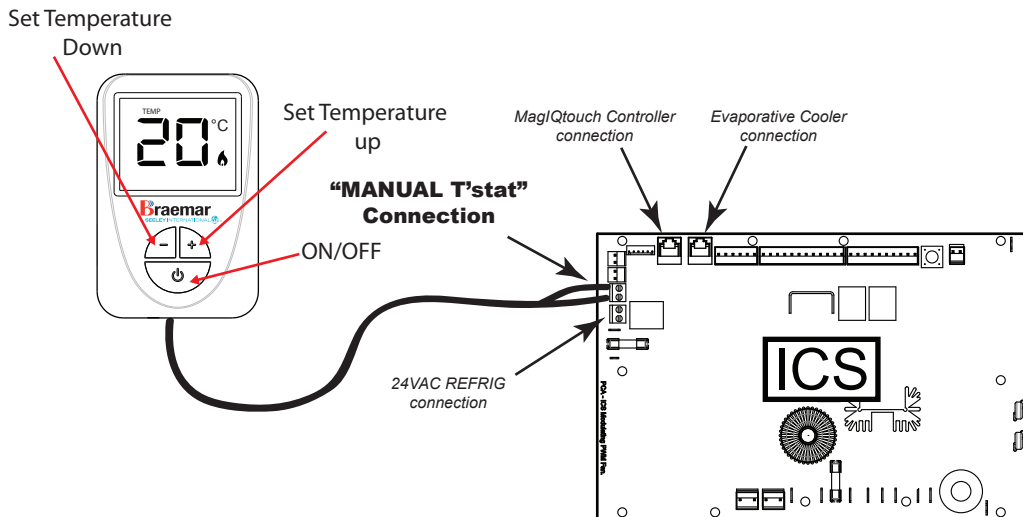

## 6. COMMISSIONING

- Commission and test the heater as described in the heater installation instructions.

## 7. CALIBRATION

- The thermostat ambient temperature value can be calibrated by +/- 5°C.
- Press the POWER button for 5 seconds to enter calibration mode.
- Using the PLUS or MINUS buttons set the desired offset value.
- Press the POWER button to accept the new offset value.



Warranty Service  
 Australia: 1300 650 644  
 New Zealand: 0800 589 151  
[seeleyinternational.com](http://seeleyinternational.com)

It is the policy of Seeley International to introduce continual product improvement. Accordingly, specifications are subject to change without notice. Please consult with your dealer to confirm the specifications of the model selected.