 




OWNER'S MANUAL

SENSORTOUCH™ CONTROLLER


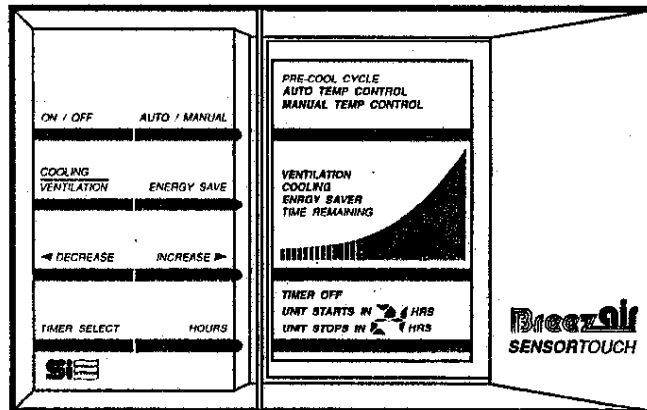


SENSORTOUCH™ IS A TRADE MARK OF SEELEY INTERNATIONAL PTY LTD

Breezair

AUTO



After pre-cooling, your Sensortouch maintains your desired temperature as indicated by the bar graph.

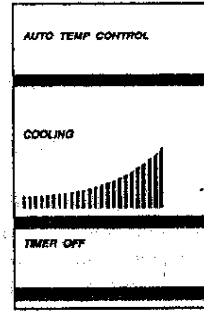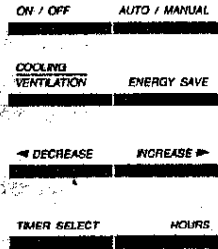

MANUAL




Selecting manual temp control allows you to choose between cooling (pump on) or ventilation (fan only) modes.

In ventilation mode, fresh air is drawn in without cooling occurring.

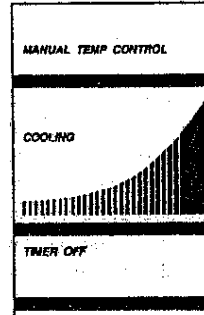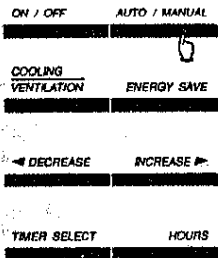

MANUAL





Once cooling has been selected, your Sensortouch will maintain the required amount of air flow as illustrated by the bar graph.

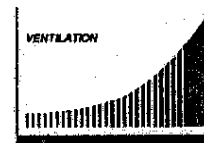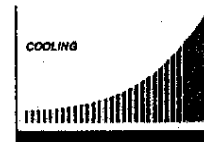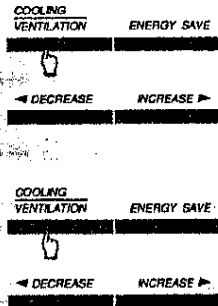

MANUAL



To increase the amount of required cooling or ventilation press the increase button.

To decrease the amount of required cooling or ventilation press the decrease button.

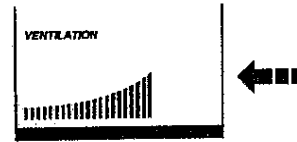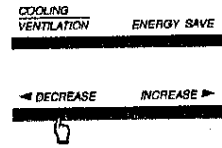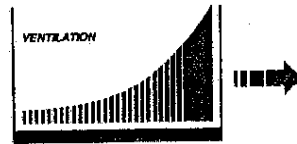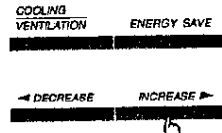

ENERGY SAVE

Selecting energy save limits the available cooling or ventilation, and reduces power used by up to 20%. The energy save function can be used in either auto or manual modes.

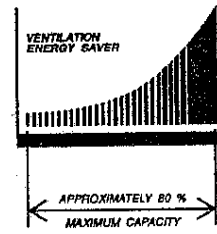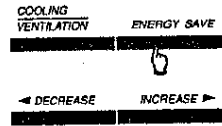




TIMER

After setting the Sensortouch to the desired comfort level, the timer may be activated in 3 modes:


OPTION 1 (SET START)

Press timer select: "unit Starts in 0 hrs" will flash. Now you can select the required hours from a 24 hour timer. For example: "Unit starts in 4 hrs". Press timer select twice to start the timer. The cooler will start after the set time has elapsed.

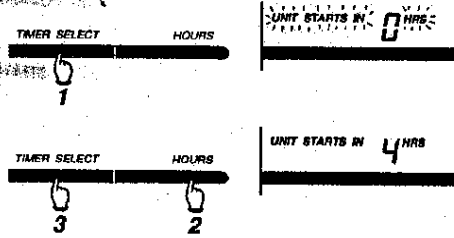

OPTION 2 (SET STOP)

Press timer select button twice: "unit Stops in 0 hrs" will flash. Now you can select the required hours from a 24 hour timer. For example: "unit Stops in 4 hrs". Press timer select again to start the timer. The cooler will run for the set time, and then turn off.

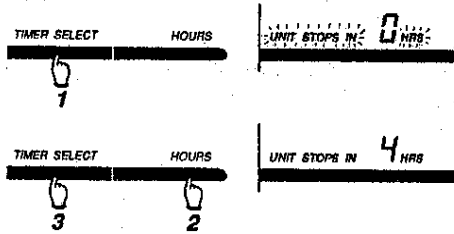

To cancel the timer setting, press the on/off button.

OPTION 3 (WINDOW Start and Stop Select TIMER)

Press timer select to illuminate "unit Starts in 0 hrs"

Now you can select the required hours. For example "unit Starts in 8 hrs". Press timer select again to illuminate "unit Stops in 0 hrs".

Now you can select the required hours for a window timer. For example "unit Stops in 4 hrs". This means the unit will run for 4 hours after an 8 hour wait.

Press timer select again, and it will confirm the window selection by illuminating, and commencing "unit Starts in 8 hrs".



Pre-cool Cycle	<p>In auto mode the pre-cool cycle will switch on the pump for a short length of time to ensure:</p> <p>The filter pads have been cleansed. Initial operation of fan circulates cool air.</p> <p>The pre-cool cycle will be omitted if the pump has run in the previous 15 minutes.</p>
Filtration Cycle	<p>The filtration cycle will run the water pump automatically for a short time every time the cooler is turned off, to ensure the filter pads are left clean.</p>
Manual Pre-cool Cycle	<p>Whilst the unit is off, the pump may be switched on manually by depressing cooling/ventilation and on/off together. The pump will remain on until on/off is operated.</p>
Temperature Display	<p>To display the temperature being sensed by the Sensortouch, depress the 4 central buttons simultaneously, push on/off twice to resume the normal display.</p>
During an Electrical Failure	<p>The cooler will be switched off and the screen will be blank. Upon restoration of the power supply the unit will revert to normal operation.</p> <p>After an extended power failure the unit will revert to the OFF condition.</p>
Abnormal Readout	<p>In the extreme case of an abnormal read out, switch the Sensortouch off and on to reinstate the previous settings.</p>
Reset & Self Diagnostic	<p>To reset the microprocessor to the default settings and to perform a self diagnostic check, press the lower 4 buttons simultaneously.</p> <p>If a number appears on the digital number display, a fault may exist and service advice should be sought.</p> <p>If no number appears, but the operation is incorrect, contact your dealer for advice.</p>
Cleaning	<p>Exterior surfaces may be cleaned with a damp cloth containing water and a little mild household detergent. Avoid the use of abrasive cleaners, aerosol cleaners and solvents, as some of these may cause permanent damage.</p>



SERVICE:

Breezair agents are located throughout Australia. The Breezair service department can be contacted on:
(08) 276 3555 or (08) 276 2355.

Spare Parts on:
(008) 882 6444 or Fax (08) 276 4542.

WARRANTY:

Your Breezair Sensortouch is covered by a two year warranty against failure due to any fault in parts or workmanship.

As the policy of this company is one of continuous product improvement, all specifications are subject to change without notice.